



USER GUIDE

TABLE OF CONTENTS

Box Contents	3
Quick Start Instructions	4
Important Information	13
Intended Use:	13
Probe Usage.....	13
Disposal Requirements	14
Technical Specifications.....	14

Box Contents



Bluetooth® LED

Digital Display

Probe Toggle Buttons

Probe Ports

iGRILL 2

Degree Symbol

Probe Indicator LEDs

Power On/Off

Base (Magnetic)

AA Batteries (2)

Yellow-Coloured
Probe Indicator

Temperature
Probe

Probe Wrap

Red-
Coloured
Probe
Indicator


Probe Wrap

Temperature
Probe




WARNING!

Probe gets hot.
Use mitts or
gloves.

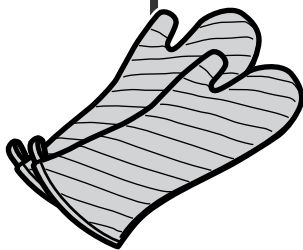

Optional Magnetic Disc

adheres to non-magnetic
surfaces for vertical mounting

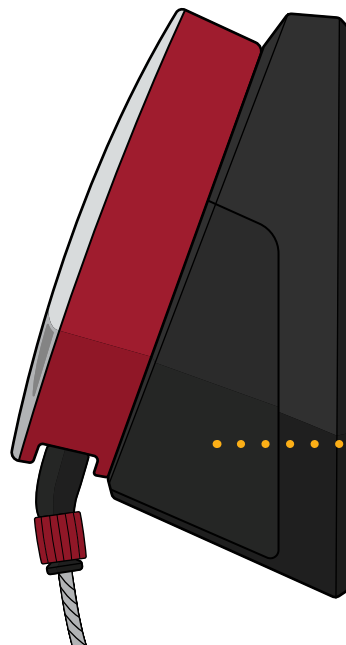

optional
vertical mounting


Quick Start Instructions

1



Separate the iGRILL 2 from the base.


2

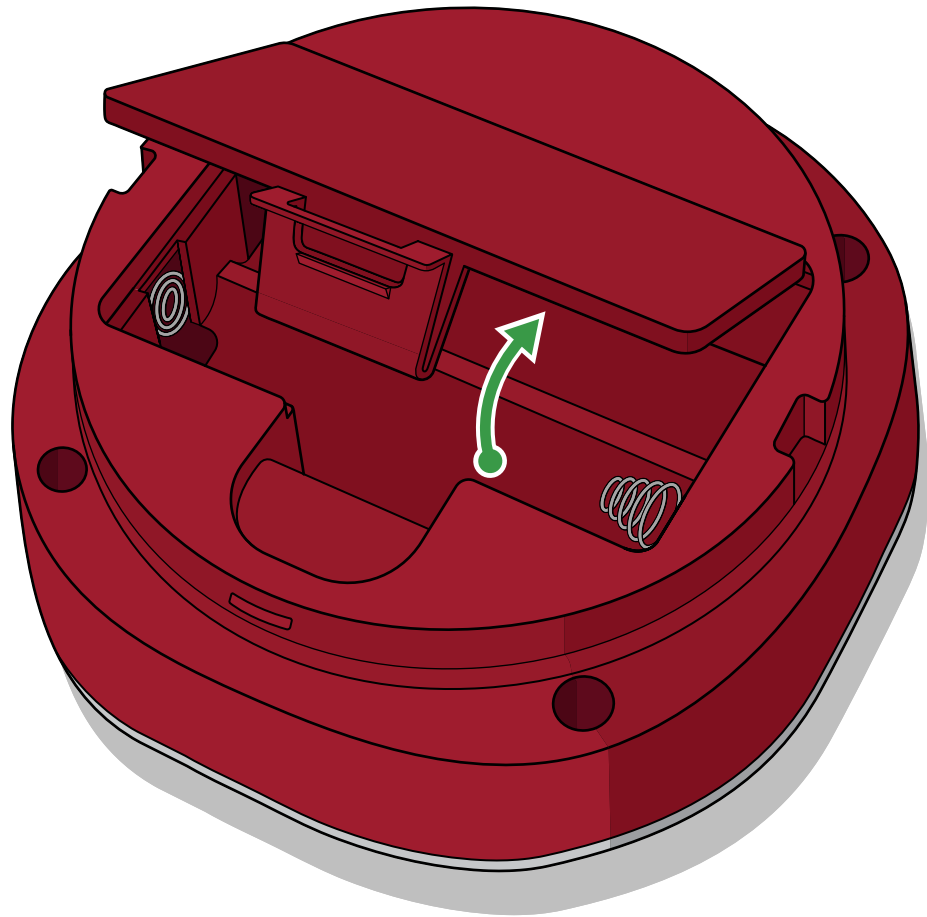

Remove the battery door from the underside of the iGRILL 2.

3

2 - AA

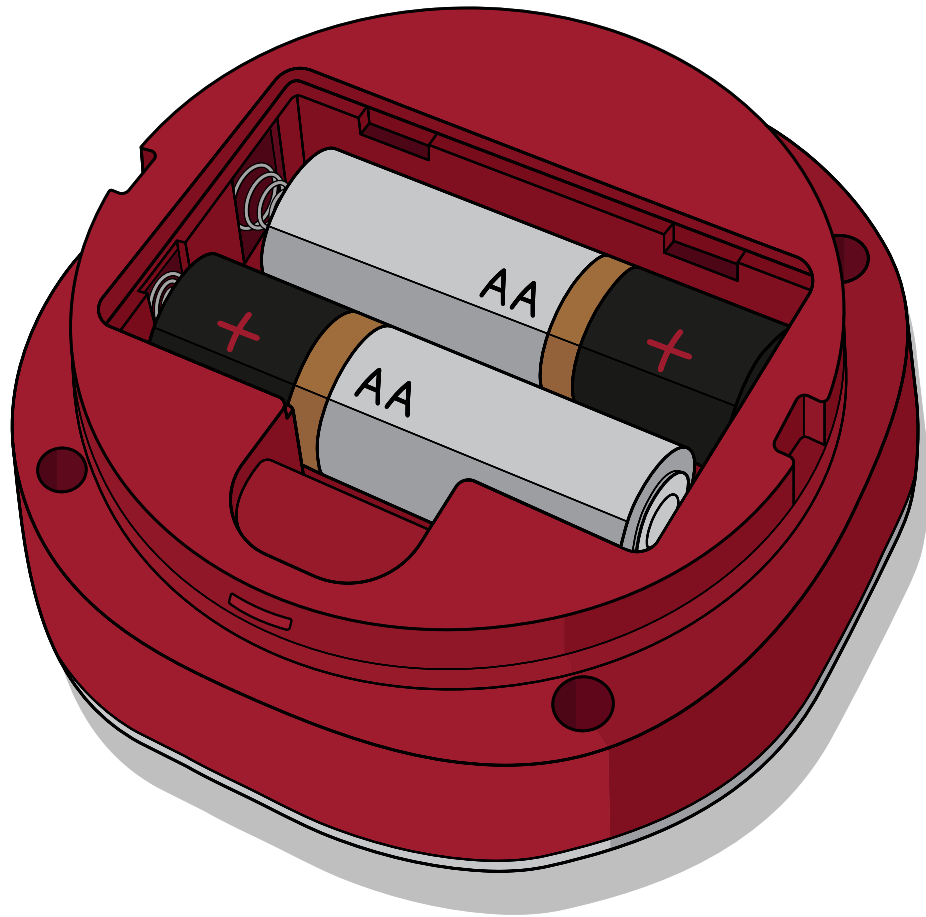

Insert the two AA batteries that were supplied with your iGRILL 2.



WARNING: Proper Battery Disposal

Never dispose of batteries in an open fire. Always dispose of batteries in accordance with local laws.


4



After the batteries are inserted, the iGRILL 2 will automatically display “On” and a single beep will sound.

If not inserting or replacing the batteries, press the power button once to turn the unit on. Do not hold the button down.

5

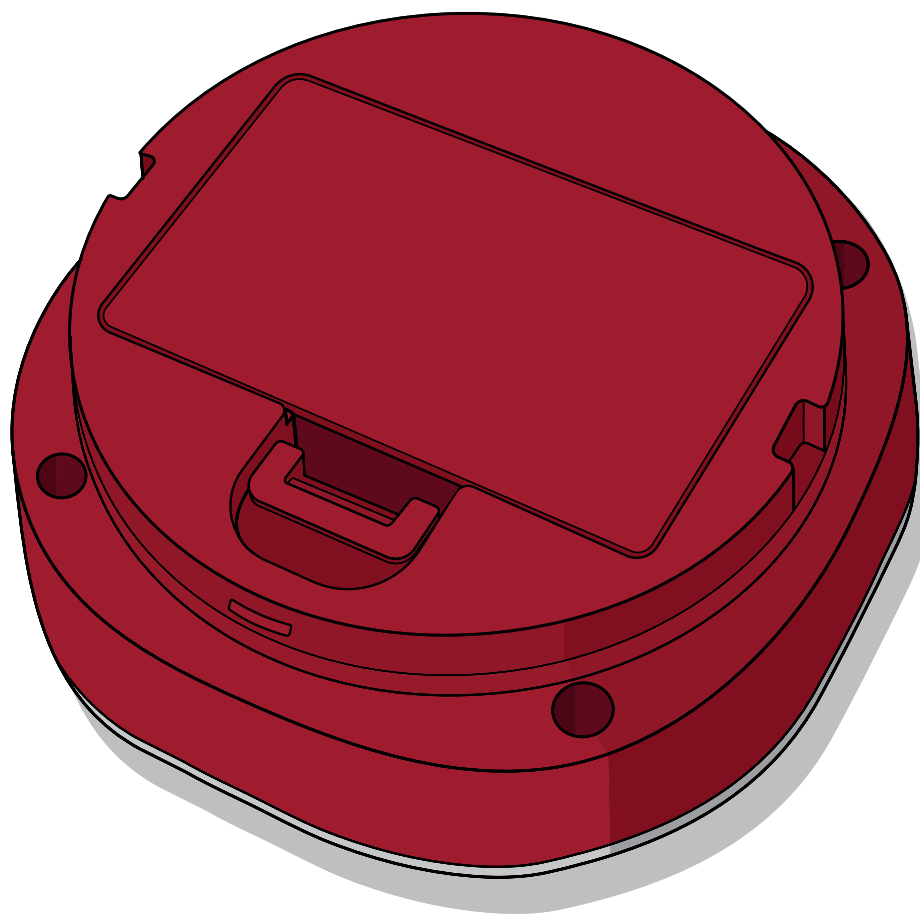

Replace the battery door.

6



Snap the iGRILL 2 back onto the base.

7



Download the WEBER iGRILL App.
Then enable Bluetooth[®] on your
smart device under 'Settings.'

8



Plug one or more probes into the ports.



WARNING: Risk of burns!

Handling the temperature probes without hand protection will result in severe burns. Please wear heat-resistant gloves or mitts at all times while using this product in order to avoid being burned.

9



Launch the WEBER iGRILL App on your smart device. Follow the pairing instructions within the App. You are now ready to use your iGRILL 2.

Additional information and barbecue inspiration can be found at weber.com/igrillsupport.

Important Information

Visit weber.com/igrillsupport to find out more about device compatibility, languages supported by the WEBER iGRILL App and a full user guide with great barbecuing inspiration. Please read the full user guide, especially the safety information, before using the WEBER iGRILL 2 for the first time. Follow the instructions while using the device.

Intended Use

Use this device to measure and monitor the temperature of barbecued foods. Any use other than that which is described may cause damage. The manufacturer or retailer are not liable for damages arising from improper use. When using an iGRILL 2, never leave your grill unattended and follow all instructions in your grill owners guide.

Note: The device is not to be used by children or persons with reduced physical, sensory or mental capabilities.

Note: The iGRILL 2 and its batteries are not designed to withstand high temperatures. If the surface is too hot to touch, it's too hot for the WEBER iGRILL 2 **and its batteries**.

Note: Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries.

Temperature Probe Use

WARNING: Risk of Injury! The temperature probes are very sharp. Please be careful when handling probes.



WARNING: Risk of burns! Handling the temperature probes without hand protection will result in severe burns. The coloured probe indicators are not intended to be touched with bare hands while using the barbecue as they are not heat-insulated. Please wear heat-resistant gloves at all times while using this product in order to avoid being burned.




Important Note: When using the probes, please be sure to route the wire where it will not be exposed to flames or temperatures exceeding 380°C. Avoid exposing the probes to temperatures below -30°C. Temperatures below -30°C or above 300°C will not display in the app and will cause the probe to disappear from the connection.

Clean the probes before first use. The probes are not dishwasher safe. Do not use chemicals or abrasive detergents to clean the probes. Wipe them down with a damp towel or cleaning wipe. Take care not to expose the probe's wiring or the area where the wiring meets the probe to liquid.

The probes are not waterproof and damage may result from water exposure. Never submerge the probes in water.

Disposal Requirements

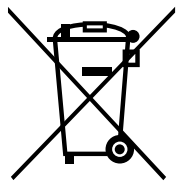

This product should not be disposed of with ordinary household rubbish. The user is obligated to take the device(s) to a designated collection point for the disposal of electrical and electronic equipment in order to ensure an environmentally-compatible disposal.



WARNING: Battery disposal! Never dispose of batteries in an open fire. Always dispose of batteries in accordance with local laws.

Technical Specifications

Frequency Range (MHz): 2402.0 - 2480.0 MHz

Output Power: 2.43 dBm

Manufacturer:

Weber-Stephen Products LLC

1415 S. Roselle Road
Palatine, IL 60067-6266
USA

Importer:

Weber-Stephen Products (EMEA) GmbH

Franklinstraße 28/29
10587 Berlin
Tel: (+49) 30 700 149 695

Customer Service Contacts:

Weber-Stephen France SAS

C.S. 80322 - 95617,
Cergy Pontoise Cedex, FRANCE
TÉL: (+33) 810 19 32 37
service.consommateurs@weberstephen.com
FR, ES, PT, IT, BE, LU, NL

Weber-Stephen Deutschland GmbH

Rheinstrasse 194, 55218
Ingelheim, DEUTSCHLAND
TEL: (+49) 6132 8999 0
info-de@weberstephen.com
DE, AT, CH, HU, CZ, SK, RO, RU, HR, BG,
GR, SI, UA, CY, AE, KW, QA, BH, SA, EG

Weber-Stephen Nordic ApS

Bøgildsmindevej 23, DK-9400,
Nørresundby, DANMARK
TEL: (+45) 99 36 30 10
info@weberstephen.dk
DK, SE, FI, NO, LV, EE, LT

Weber-Stephen Polska Sp. z o.o.

Ul. Minerska 29 lok.1, 04-506
Warszawa, POLSKA
TEL. (+48) 22 392 04 69
info-pl@weberstephen.com
PL

Weber-Stephen Products (UK) Ltd

10th Floor - Metro Building, 1 Butterwick,
Hammersmith, London W6 8DL, UK
TEL: +44 (0) 203 630 1500
customerserviceuk@weberstephen.com
GB, IE

WEBER Stephen Turkey Ev ve Bahçe

Malzemeleri Ticaret Ltd. Şti
İstoç Toptancılar Çarşısı C Blok 4. Kat No: 31
34219 Mahmutbey/Güneşli / İstanbul
Tel: +90 212 659 64 80 Pbx
Fax: +90 212 659 64 83
TR

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Weber-Stephen Products LLC is under licence. Other trademarks and trade names are those of their respective owners.

