LEFT FRAME PANEL REPLACEMENT INSTRUCTIONS

THIS PROCEDURE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED WEBER-STEPHEN PRODUCTS LLC SERVICE TECHNICIAN

⚠ WARNING: GENUINE WEBER-STEPHEN REPLACEMENT PARTS MUST BE USED FOR ANY REPAIR OR REPLACEMENT. YOUR ACTIONS, IF YOU FAIL TO FOLLOW THIS PRODUCT WARNING, MAY CAUSE A FIRE, AN EXPLOSION, OR STRUCTURAL FAILURE RESULTING IN SERIOUS PERSONAL INJURY OR DEATH AS WELL AS DAMAGE TO PROPERTY.
(WILL VOID ALL WARRANTY PROTECTION.)

⚠ DANGER: BEFORE PERFORMING ANY WORK MAKE SURE THE GAS SUPPLY IS TURNED OFF AT THE SOURCE. FAILURE TO FOLLOW DANGERS, WARNINGS AND CAUTIONS CONTAINED IN THIS INSTRUCTION SHEET MAY CAUSE A FIRE OR AN EXPLOSION RESULTING IN SERIOUS PERSONAL INJURY OR DEATH AS WELL AS DAMAGE TO PROPERTY.

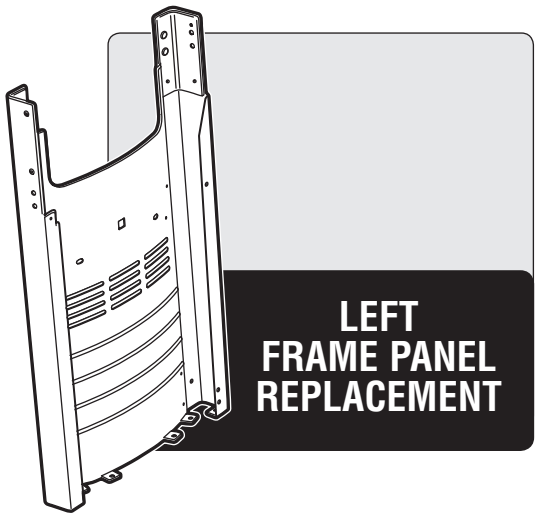

⚠ BEFORE STARTING: Make sure lid is closed and casters are locked to prevent grill from moving.

NOTE: Grills illustrated may differ slightly from model purchased.

1 DISCONNECTION OF HOSE FROM GAS SOURCE

NORTH AMERICAN GRILLS

LP UNITS:

A) Make sure gas supply is turned off at source.
B) Disconnect LP cylinder from inside of cabinet base.
C) Remove LP cylinder from cabinet base.

⚠ **WARNING: Do not use a wrench to loosen the connection. Using a wrench could damage the regulator coupling and could cause a leak.**

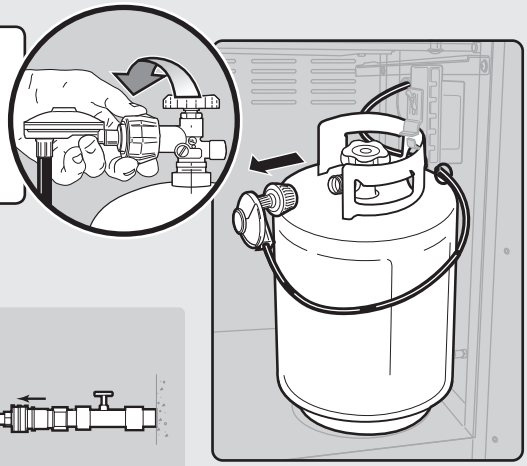

NG UNITS:

A) Make sure gas supply is turned off at source.
B) Slide collar of quick-disconnect back to remove flexible gas supply hose from gas source.

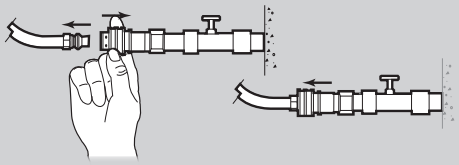

EXPORT GRILLS

LPG UNITS:

⚠ **WARNING: Make sure that the LPG cylinder or regulator valve is closed.**

A) Remove the gas supply cylinder by shutting off the gas supply and disconnecting the hose and regulator assembly from the cylinder.

Identify your regulator type. Follow the disconnection instructions for that regulator.

Disconnect by Turning Anti-Clockwise
Unscrew regulator from cylinder by turning fitting anti-clockwise **(1)**.

Disconnect by Turning Clockwise
Unscrew regulator from cylinder by turning fitting clockwise **(2) (3)**.

Disconnect by Turning Lever
Turn regulator lever to the down/off position **(4)**. Push in on regulator lever **(5)** until it releases from the cylinder **(6)**.

Disconnect by Sliding Collar
Make sure regulator lever is in the off position **(7) (9)**. Slide the collar of the regulator up **(8) (10)** to disconnect from the cylinder.

B) Remove LPG cylinder.

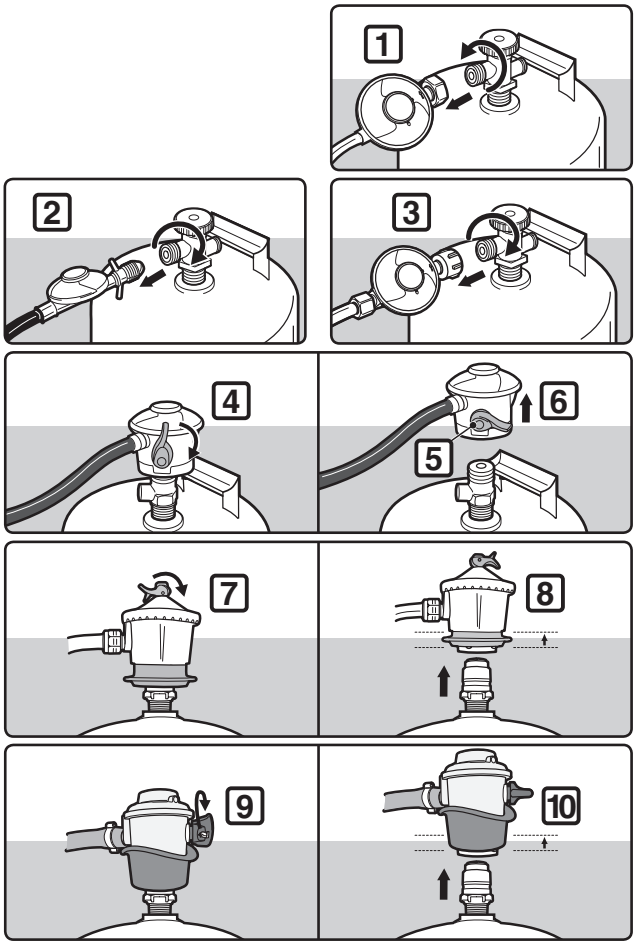

NG UNITS:

A) Make sure gas supply is turned off at source.

Manual Shut-Off Valve

B) Disconnect flexible gas supply hose from manual shut-off valve **(11)**. Refer to instructions included with your flexible gas supply hose.

— OR —

Gas Outlet Valve

B) Disconnect flexible gas supply hose from gas outlet valve **(12)**. Pull plug out to disengage hose from cover plate. (This automatically shuts off gas.) Refer to instructions included with your flexible gas supply hose.

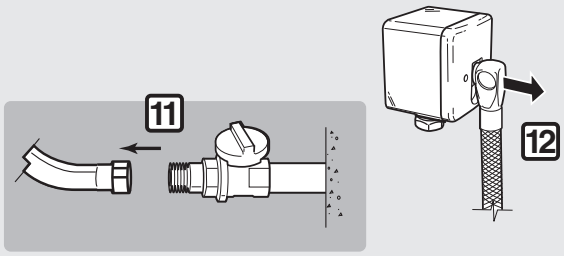

See Owner's Guide for complete gas connection and removal instructions.

2 LID ASSEMBLY AND COOKBOX COMPONENTS REMOVAL

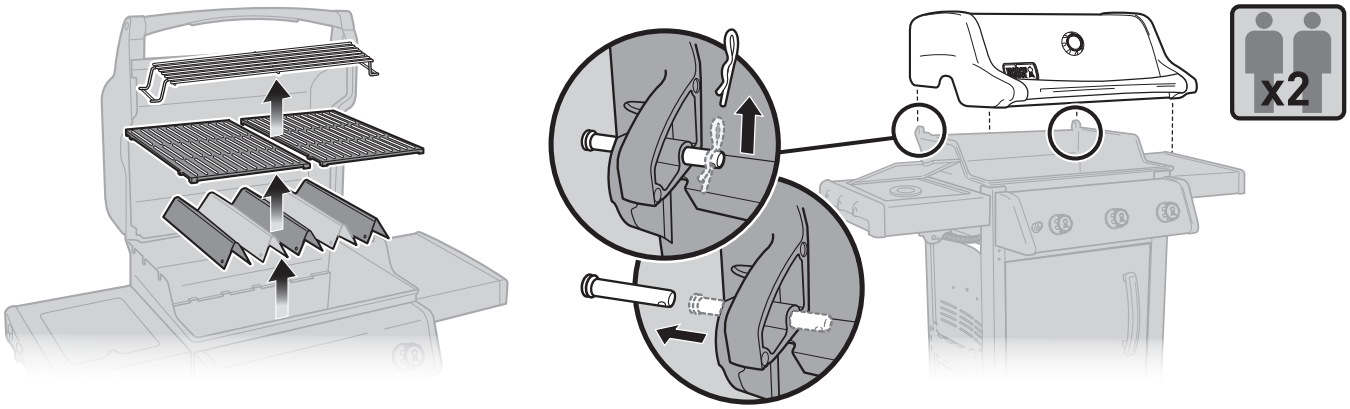

3 GREASE TRAY / DRIP PAN REMOVAL

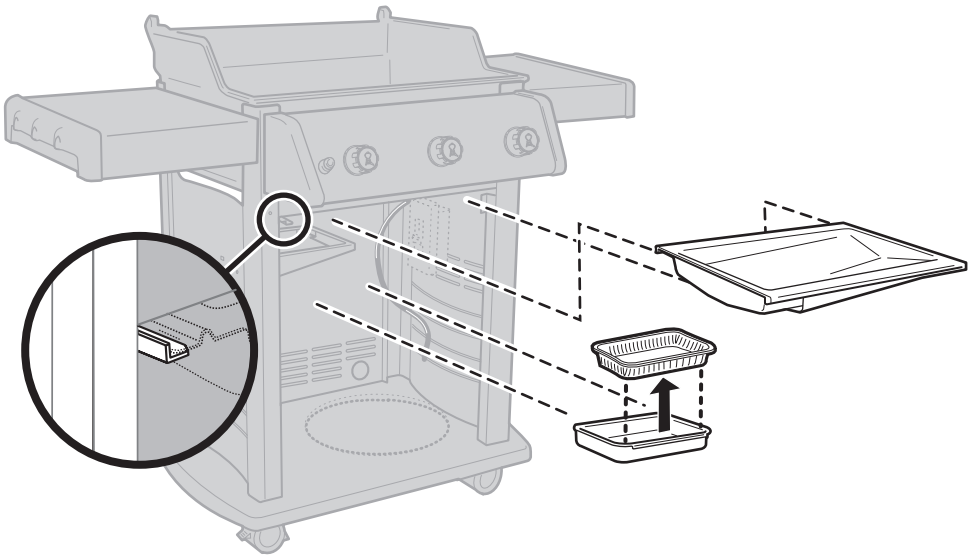

4 CONTROL PANEL REMOVAL

TOOLS NEEDED: - PHILLIPS

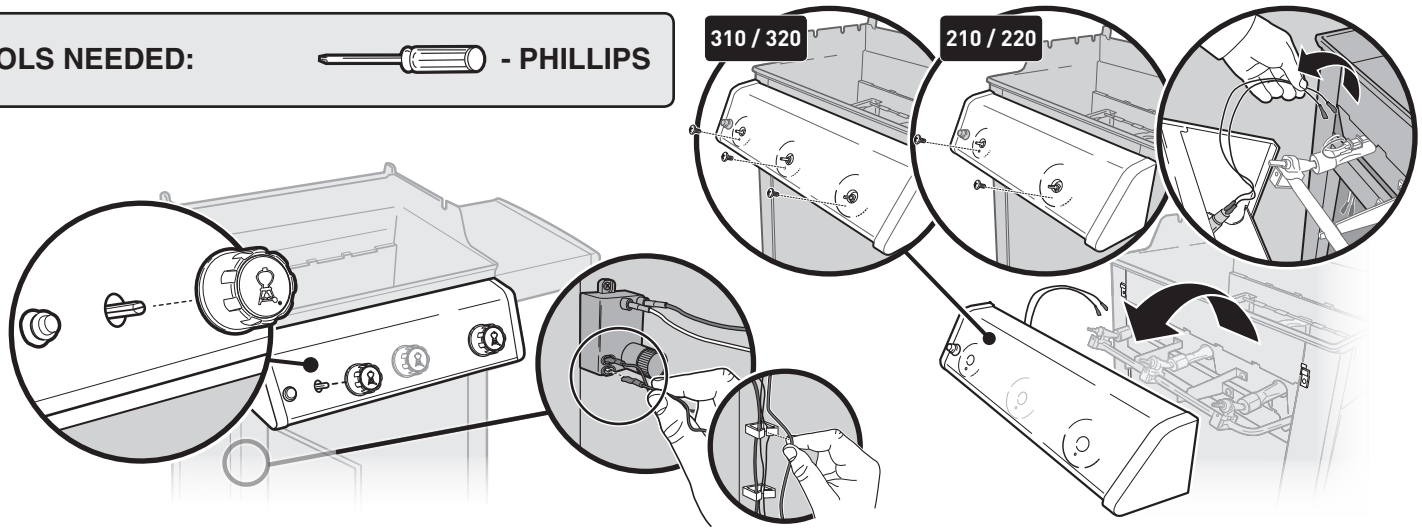

5 DOOR ASSEMBLY REMOVAL

TOOLS NEEDED: - FLATHEAD

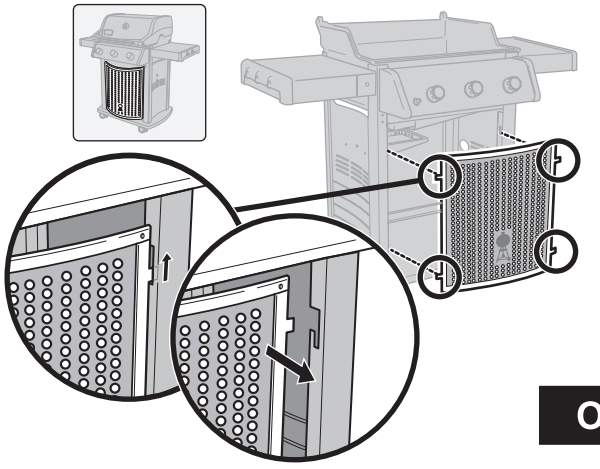

OR

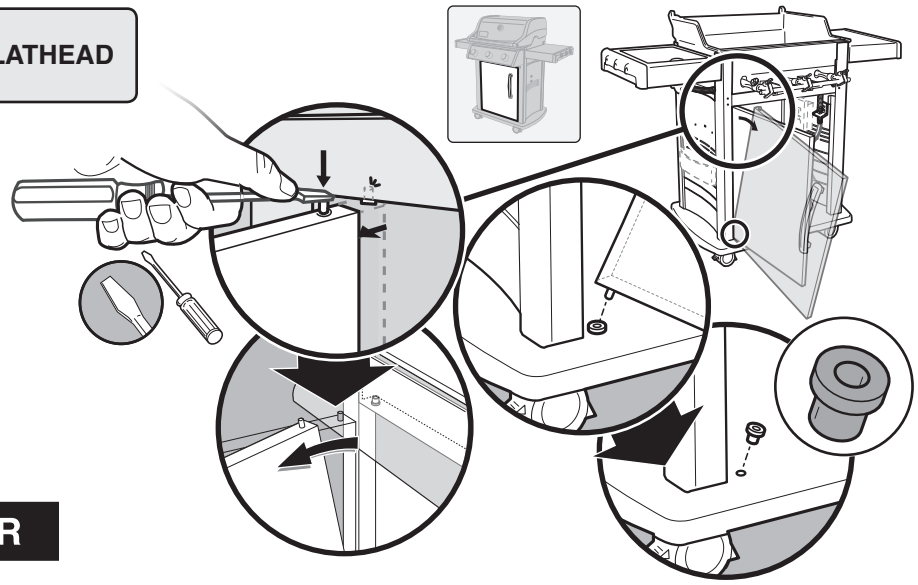

6 SIDE BURNER VALVE ASSEMBLY REMOVAL

TOOLS NEEDED: - PHILLIPS

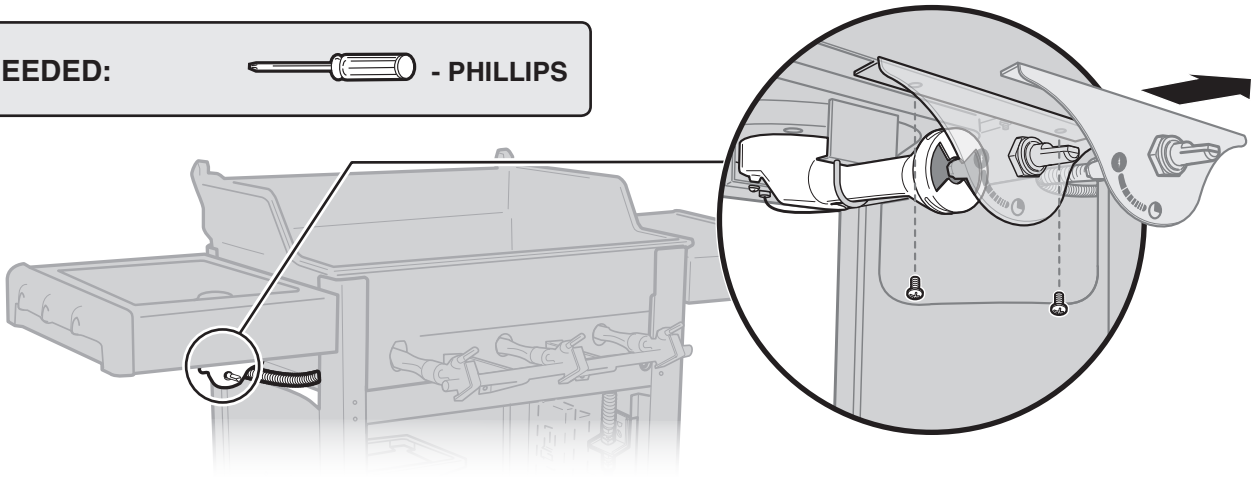

7 SIDE BURNER TABLE ASSEMBLY REMOVAL

TOOLS NEEDED: - 7/16"

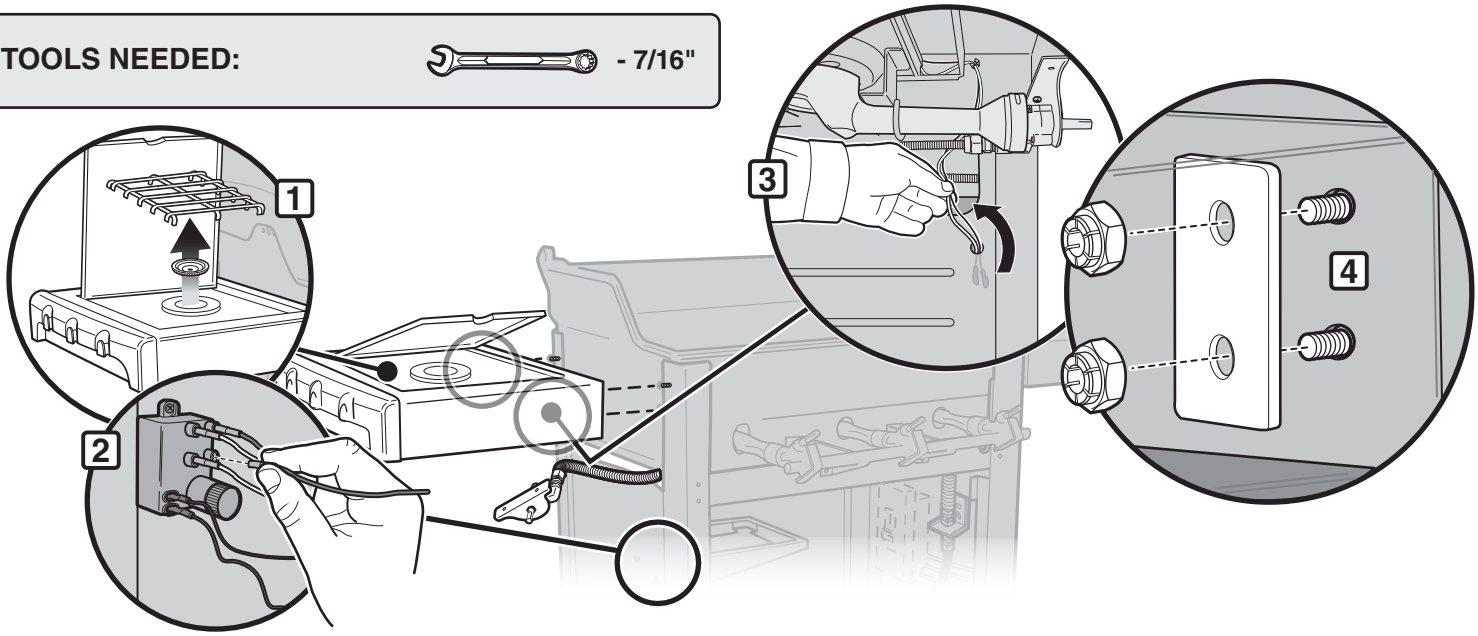

8 BULKHEAD ASSEMBLY REMOVAL

TOOLS NEEDED: - PHILLIPS

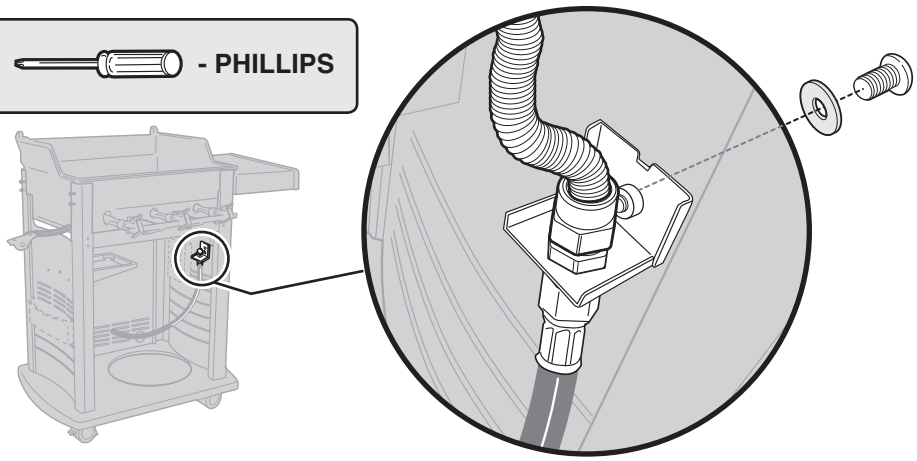

9 COOKBOX ASSEMBLY REMOVAL

TOOLS NEEDED: - PHILLIPS

REMOVAL NOTE: Make sure bulkhead and side burner gas line do not catch on frame assembly when lifting out cookbox assembly.

CAREFULLY SET ENTIRE COOKBOX ASSEMBLY DOWN. DO NOT KINK OR CRIMP MAIN OR SIDE BURNER GAS LINES.

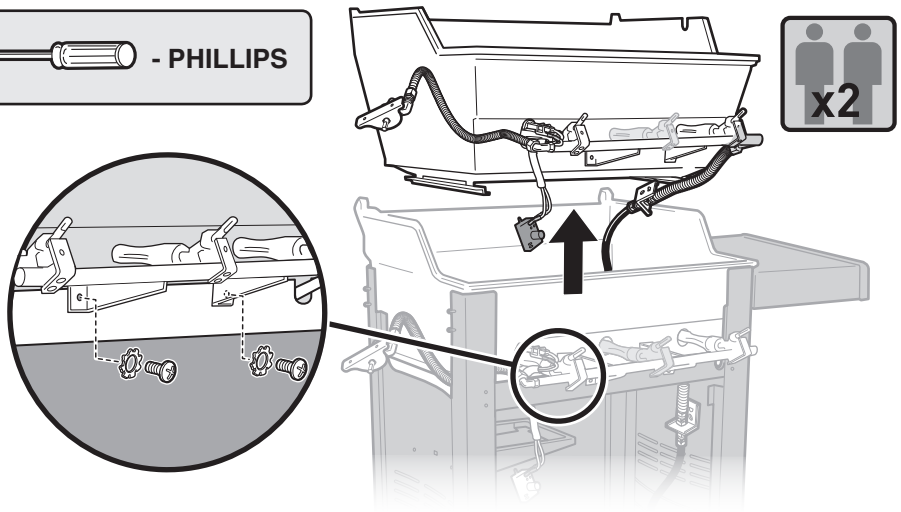

10 BACK PANEL REMOVAL

TOOLS NEEDED: - PHILLIPS

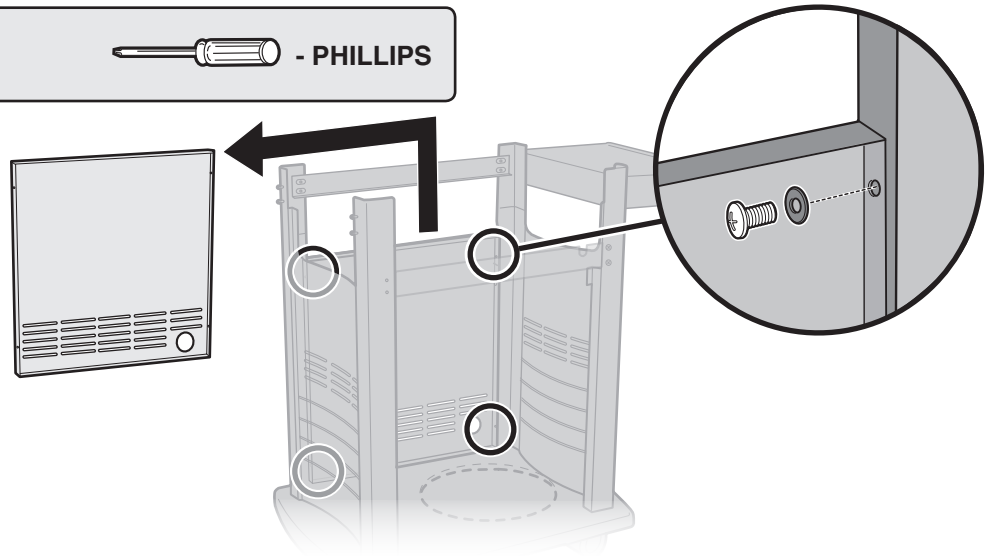

11 REMOVAL OF LEFT FRAME PANEL COMPONENTS

TOOLS NEEDED: - PHILLIPS

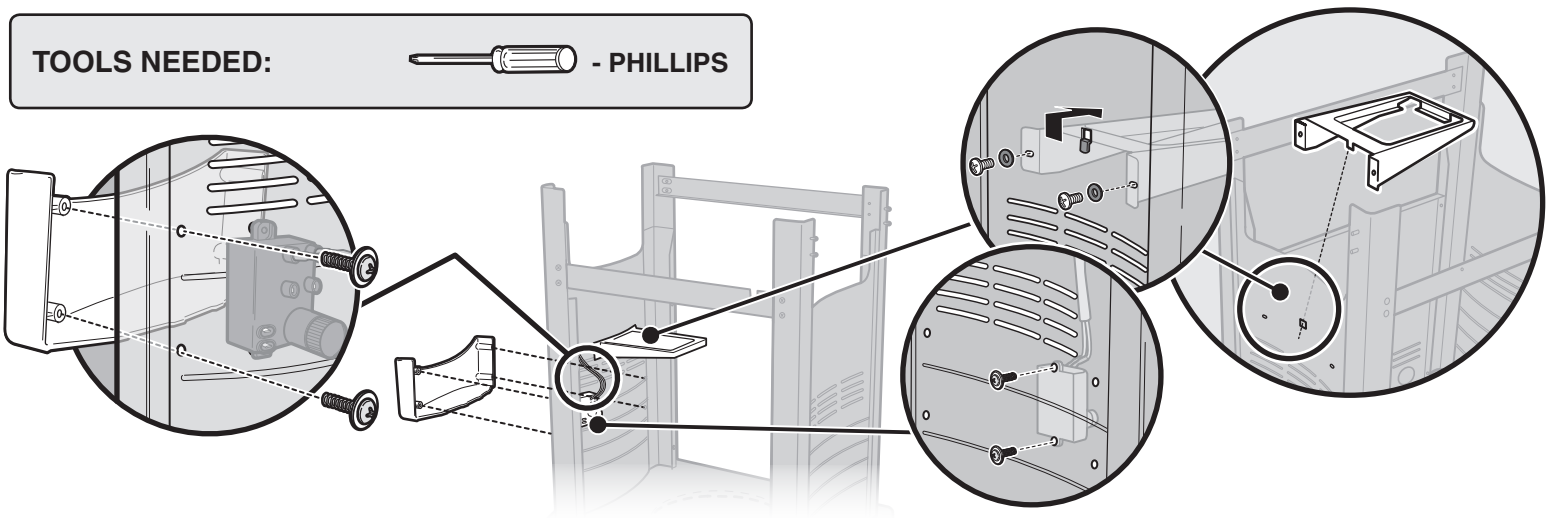

12 LEFT FRAME PANEL REMOVAL

TOOLS NEEDED: - PHILLIPS

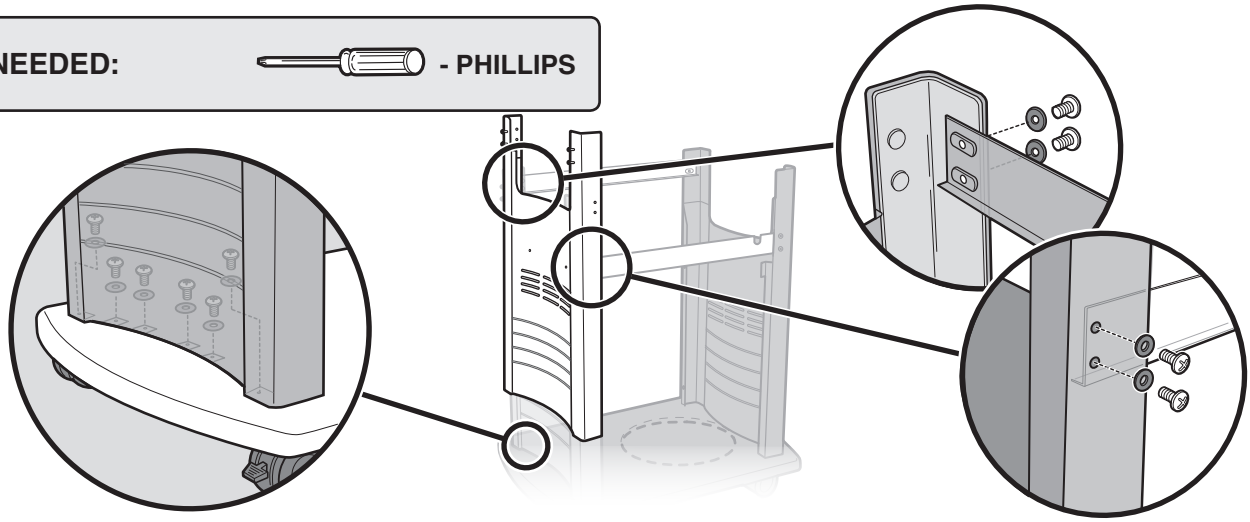

• REPLACEMENT PART INSTALLATION

13 LEFT FRAME PANEL INSTALLATION

TOOLS NEEDED: - PHILLIPS

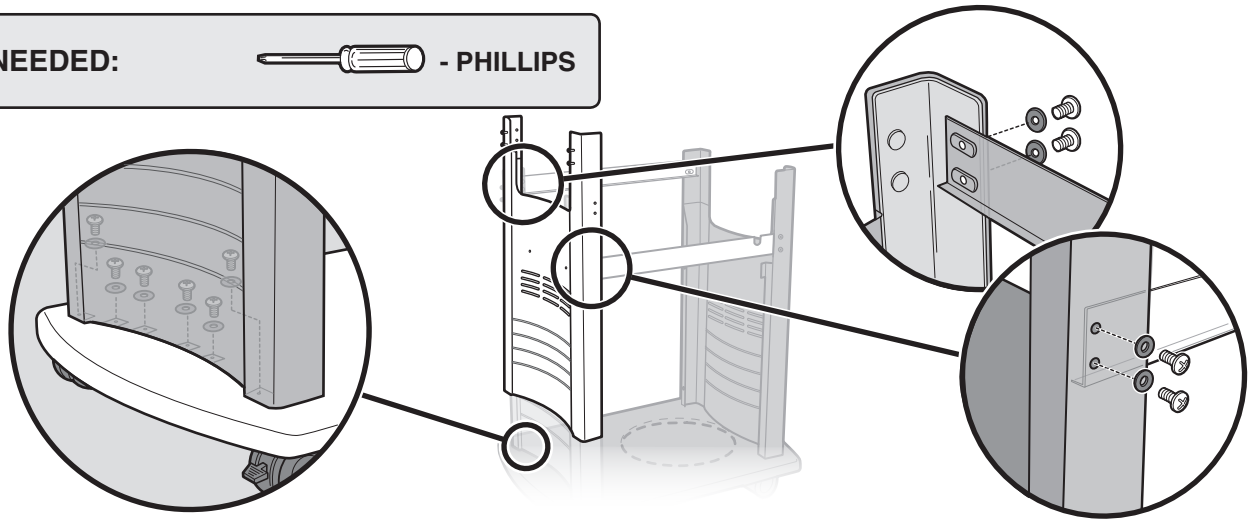

14 REINSTALLATION OF LEFT FRAME PANEL COMPONENTS

TOOLS NEEDED: - PHILLIPS

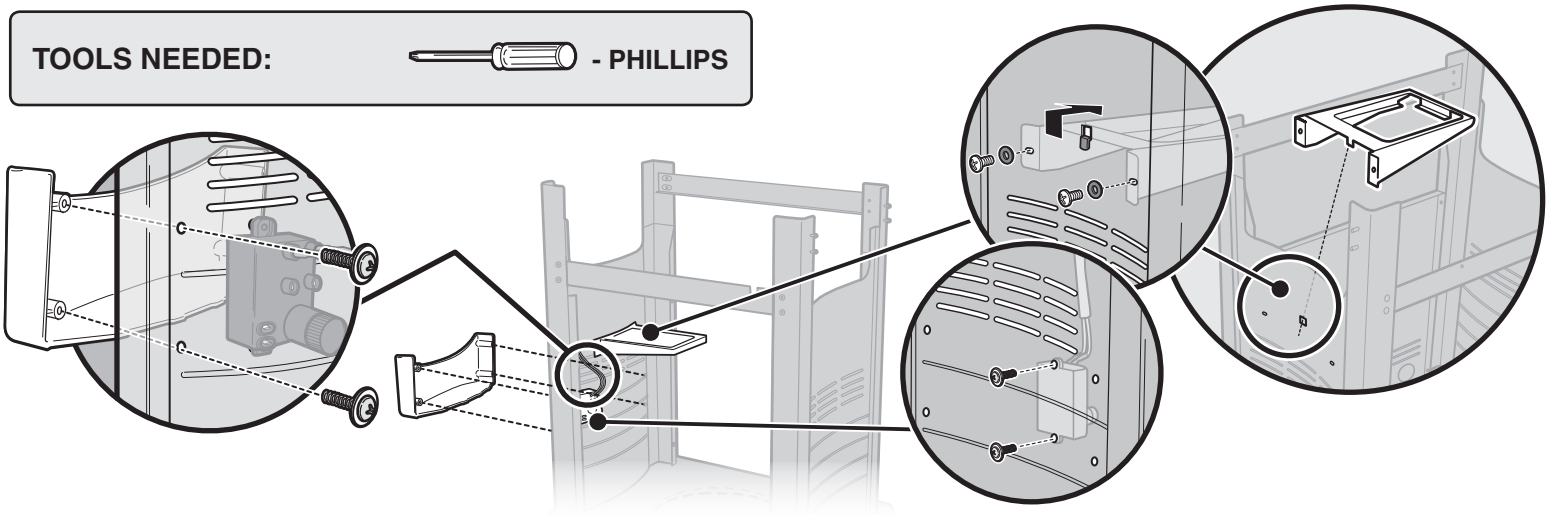

15 BACK PANEL REINSTALLATION

TOOLS NEEDED: - PHILLIPS

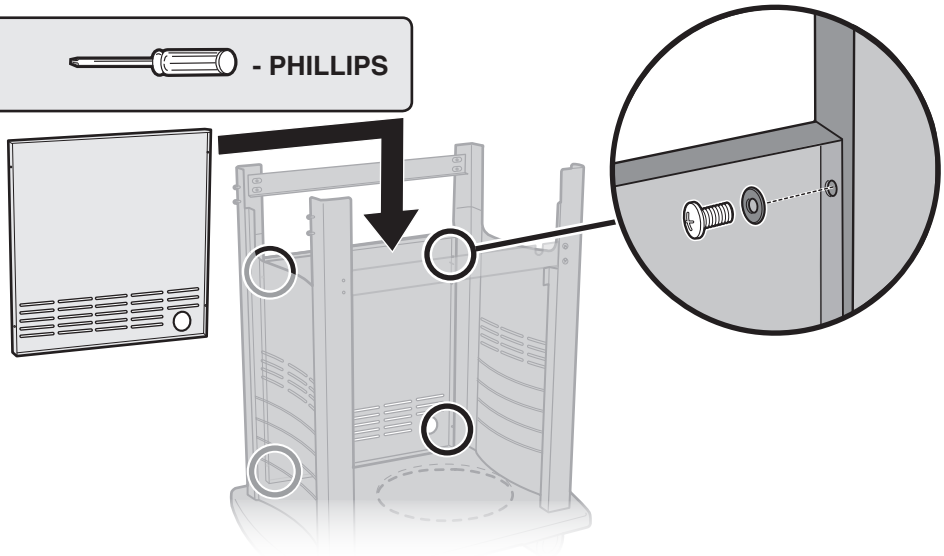

16 COOKBOX ASSEMBLY REINSTALLATION

TOOLS NEEDED: - PHILLIPS

REASSEMBLY NOTE: Main gas line and side burner gas line should be placed between cookbox assembly and front frame support when installing the cookbox assembly.

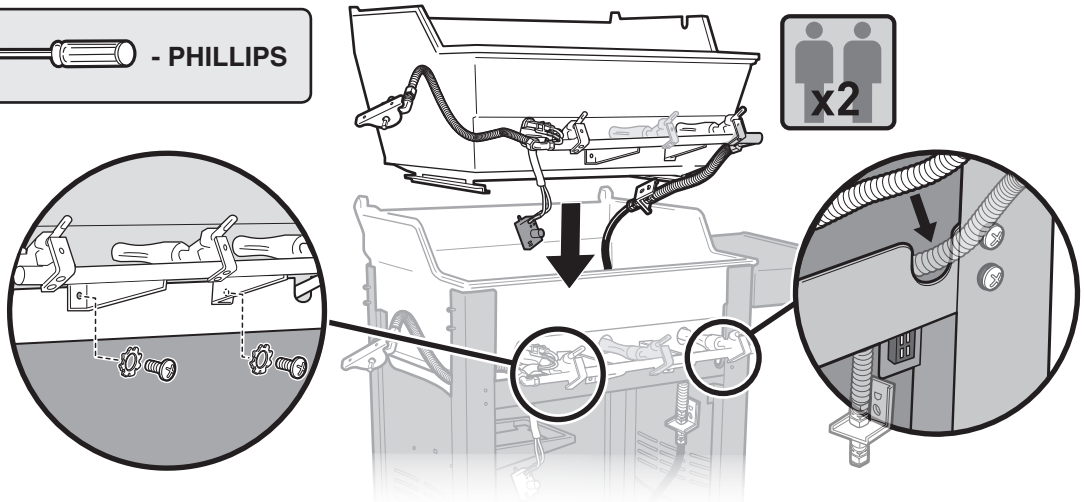

17 BULKHEAD ASSEMBLY REINSTALLATION

TOOLS NEEDED: - PHILLIPS

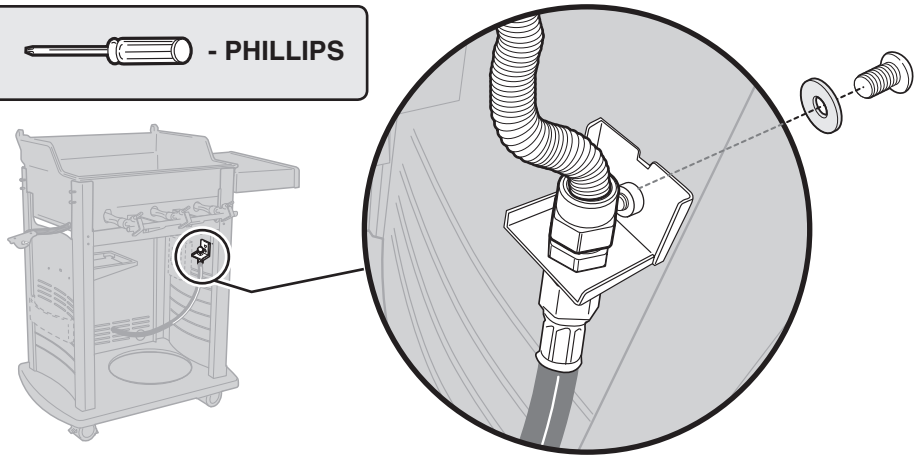

18 CONTROL PANEL REINSTALLATION

TOOLS NEEDED: - PHILLIPS

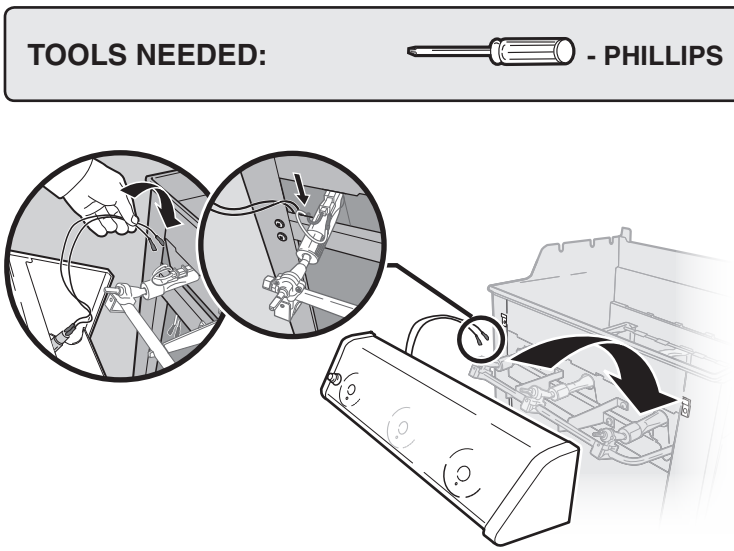

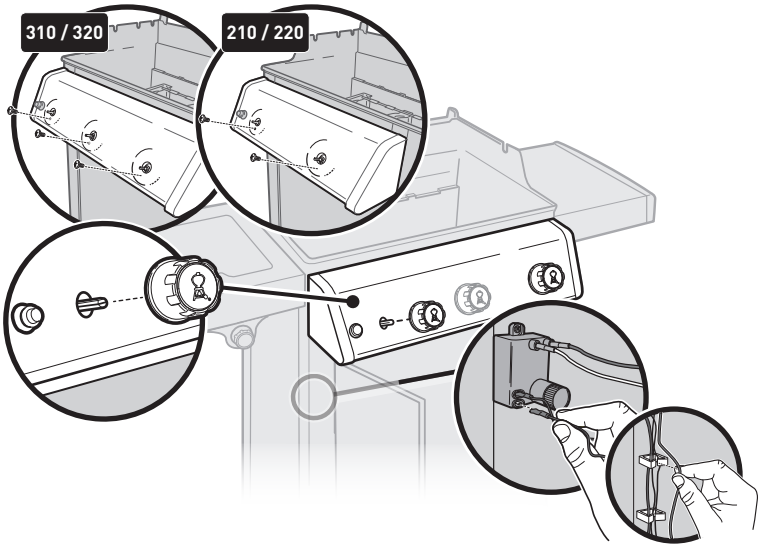

19 SIDE BURNER TABLE ASSEMBLY REINSTALLATION

TOOLS NEEDED: - 7/16"

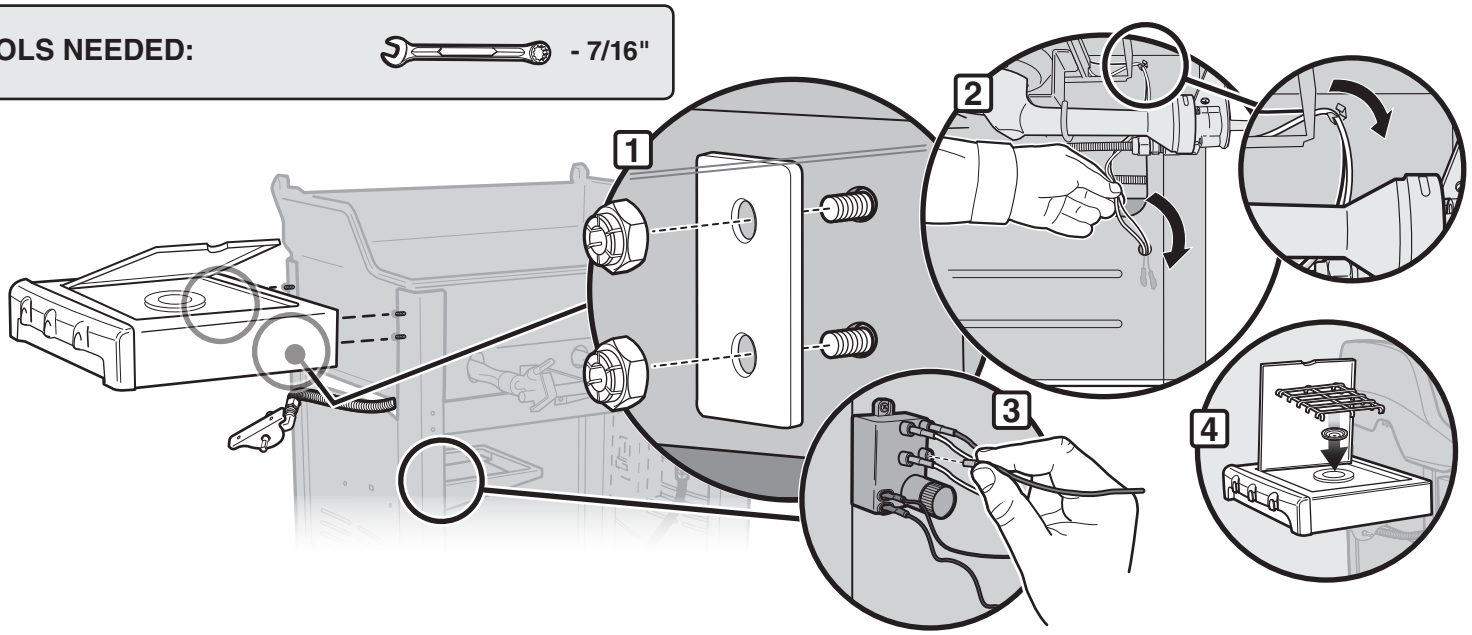

20 SIDE BURNER VALVE ASSEMBLY REINSTALLATION

TOOLS NEEDED: - PHILLIPS

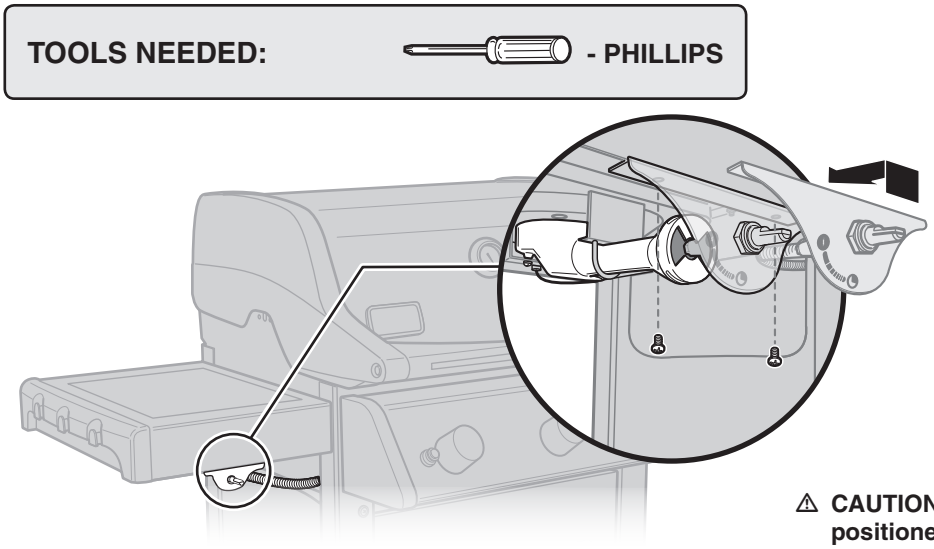

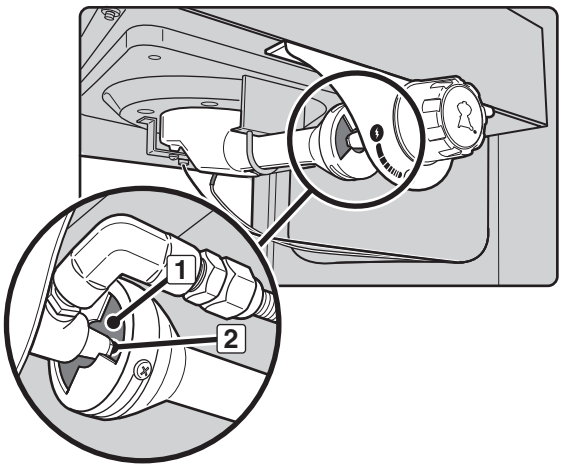

⚠ **CAUTION: The side burner tube opening (1) must be positioned properly over the side burner valve orifice (2).**

21 CHECK IGNITER WIRES

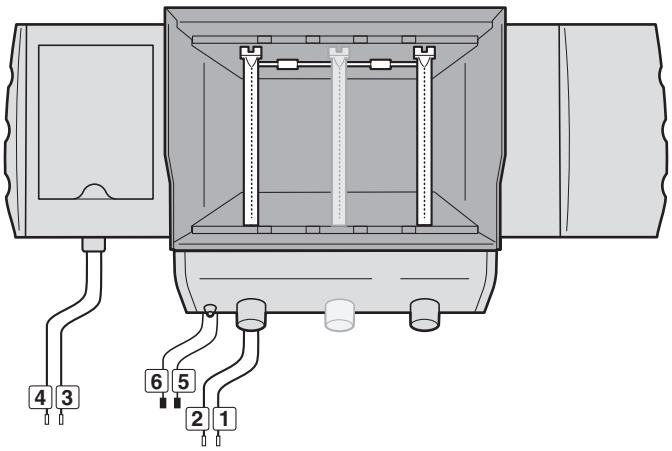

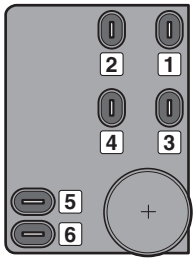

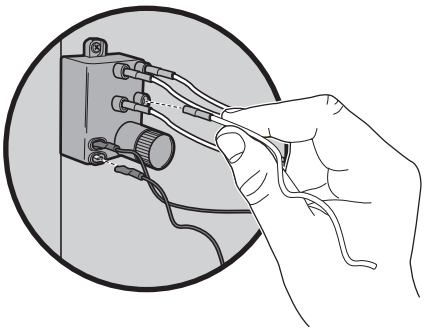

REASSEMBLY NOTE: After completely checking igniter wires, check for igniter spark. Push down on igniter button, listen for a clicking sound, and check for a spark at ceramic igniter. If you hear a click and see a spark, igniter module is working.

22 GREASE TRAY / DRIP PAN REINSTALLATION

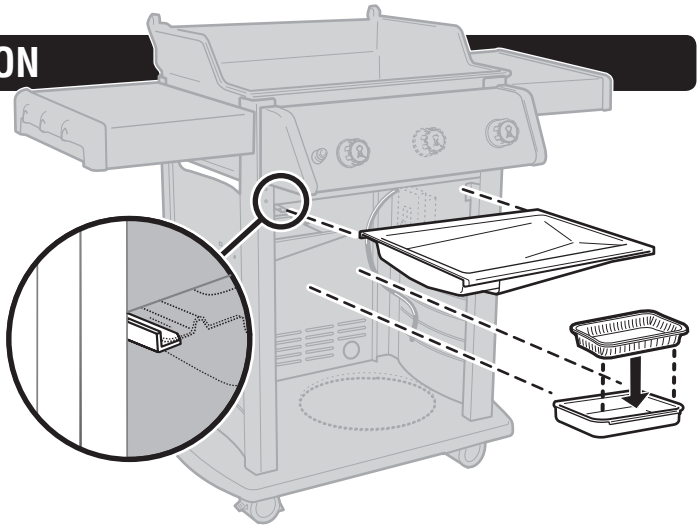

23 DOOR ASSEMBLY REINSTALLATION

TOOLS NEEDED: - FLATHEAD

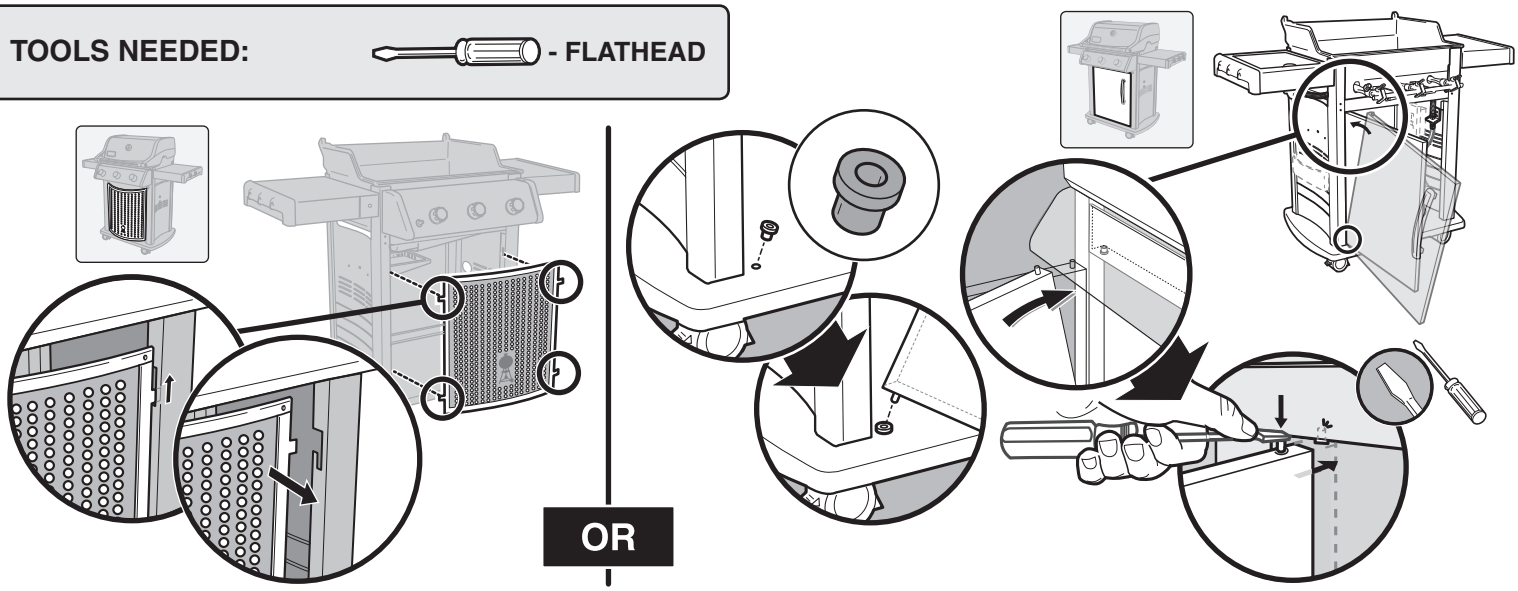

24 LID ASSEMBLY AND COOKBOX COMPONENTS REINSTALLATION

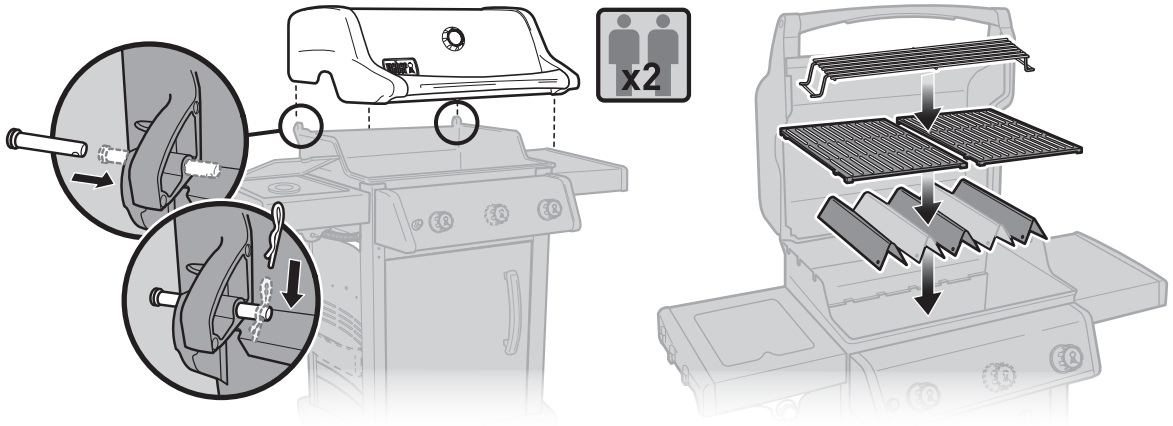

⚠ **PROPOSITION 65 WARNING: HANDLING THE BRASS MATERIAL ON THIS PRODUCT EXPOSES YOU TO LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.**

(WASH HANDS AFTER HANDLING THIS PRODUCT.)

⚠ **WARNING: Make sure all parts are assembled and hardware is fully tightened before operating the grill. Your actions, if you fail to follow this product warning, may cause a fire, an explosion, or structural failure resulting in serious personal injury or death as well as damage to property.**

⚠ **WARNING: Make sure all control knobs are turned to the OFF position before reconnecting gas supply and operating grill. Your actions, if you fail to follow this Product Warning, may cause a fire, an explosion, or structural failure resulting in serious personal injury or death as well as damage to property.**

25 CONNECTION OF HOSE TO GAS SOURCE

NORTH AMERICAN GRILLS

LP UNITS:

A) Reinstall LP cylinder into cabinet base.
B) Screw regulator coupling onto cylinder valve; turn clockwise, or to the right.

⚠ **WARNING: Do not use a wrench to tighten connection. Using a wrench could damage regulator coupling and could cause a leak.**

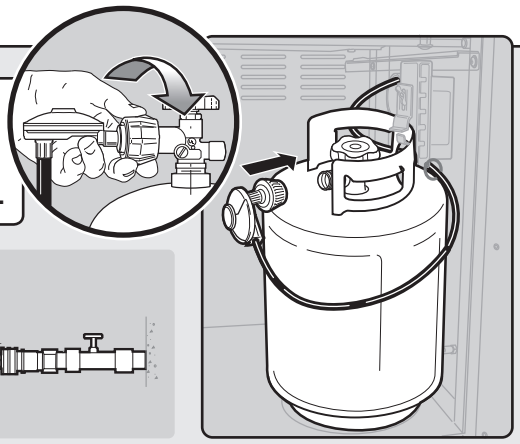

NG UNITS:

A) Make sure gas supply is turned off at source.

B) Slide collar of quick-disconnect back and reconnect flexible gas supply hose.

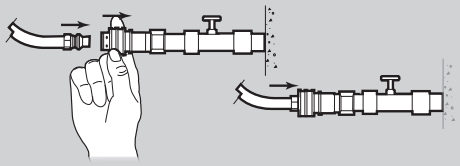

EXPORT GRILLS

LPG UNITS:

⚠ **WARNING: Make sure that the LPG cylinder or regulator valve is closed.**

A) Connect regulator to LPG cylinder.

Some regulators push ON to connect and pull OFF to disconnect; others have a nut with a left-hand thread that connects to the cylinder valve.

Identify your regulator type and follow one of the connection instructions specific to that regulator.

Connect by Turning Clockwise
Screw regulator onto cylinder by turning fitting clockwise **(1)**. Position the regulator so that the vent hole **(2)** faces down.

Connect by Turning Anti-Clockwise
Screw regulator onto cylinder by turning fitting anti-clockwise **(3) (4)**.

Connect by Pushing Lever/Snapping into Position
Turn regulator lever **(5)** to the down/off position. Push regulator down on cylinder valve until regulator snaps into position **(6)**.

Connect by Sliding Collar
Make sure regulator lever is in the off position **(7) (10)**. Slide the collar of the regulator up **(8) (11)**. Push the regulator down onto the cylinder valve and maintain pressure. Slide collar down to close **(9) (12)**. If regulator does not lock, repeat procedure.

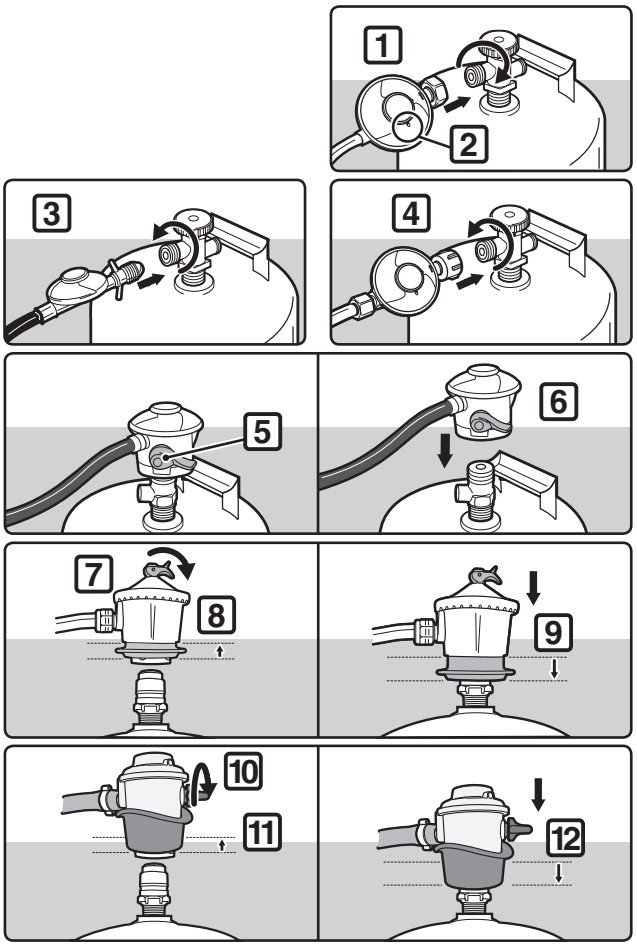

NG UNITS:

A) Make sure gas supply is turned off at source.

Manual Shut-Off Valve

B) Connect flexible gas supply hose to manual shut-off valve **(13)**. Refer to instructions included with your flexible gas supply hose.

— OR —

Gas Outlet Valve

B) Connect flexible gas supply hose to gas outlet valve **(14)**. Insert plug into circular receptacle on cover plate, slide plug upward, and push plug in to engage. Refer to instructions included with your flexible gas supply hose.

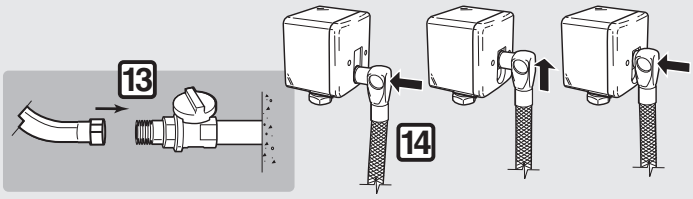

See Owner's Guide for complete gas connection and removal instructions.

⚠ ATTENTION: This product has been safety-tested and is only certified for use in a specific country. Refer to country designation located on outside of box.

These parts may be gas-carrying or gas-burning components. Please contact Weber-Stephen Products LLC Customer Service Department for genuine Weber-Stephen Products LLC replacement part(s) information.

⚠ WARNING: Do not attempt to make any repair to gas-carrying or gas-burning components without contacting Weber-Stephen Products LLC Customer Service Department. Your actions, if you fail to follow this product warning, may cause a fire or an explosion resulting in serious personal injury or death and damage to property.

This symbol indicates that the product cannot be disposed of with household refuse. For instructions regarding proper disposal of this product in Europe, please visit www.weber.com®, and contact the importer listed for your country. If you do not have internet access, contact your dealer for the importer's name, address and telephone number.

When you decide to dispose of or discard your barbecue, all electrical components (e.g., rotisserie motor, batteries, ignition module, handle lights) must be removed and disposed of properly according to WEEE. They should be disposed of separately from the barbecue.

WEBER-STEPHEN ÖSTERREICH GMBH
Maria-Theresia-Straße 51
4600 Wels
AUSTRIA
TEL: +43 7242 890 135 0; info-at@weberstephen.com

WEBER-STEPHEN PRODUCTS BELGIUM Sprl
Blarenberglaan 6 Bus 4
Industriezone Noord
BE-2800 Mechelen
BELGIUM
TEL: +32 015 28 30 90; infobelux@weberstephen.com

WEBER-STEPHEN CZ & SK spol. s r.o.
U Hajovny 246
25243 Průhonice
CZECH REPUBLIC
TEL: +42 267 312 973; info-cz@weberstephen.com

WEBER-STEPHEN NORDIC ApS
Bøgildsmindevej 23, DK-9400 Nørresundby
DANMARK
TEL: +45 99 36 30 10; info@weberstephen.dk

WEBER-STEPHEN NORDIC MIDDLE EAST
Ras Al Khaimah FTZ
P.O. Box 10559
UNITED ARAB EMIRATES
TEL: +971 4 360 9256; info@weberstephen.ae

WEBER-STEPHEN FRANCE SAS
Eragny sur Oise – BP 80322
95617 Cergy Pontoise Cedex
FRANCE
TÉL: +33 810 19 32 37
service.consommateurs@weberstephen.com

WEBER-STEPHEN DEUTSCHLAND GmbH
Rheinstraße 194
55218 Ingelheim
DEUTSCHLAND
TEL: +49 6132 8999 0; info-de@weberstephen.com

WEBER-STEPHEN NETHERLANDS B.V.
Tsjûkemarwei 12
8521 NA Sint Nicolaasga
Postbus 18
8520 AA Sint Nicolaagsa
NETHERLANDS
TEL: +31 513 4333 22; info@weberbarbecues.nl

JARN & GLER WHOLESALE EHF
Skutuvogur 1H
1-104 Reykjavik
ICELAND
TEL: +354 58 58 900

D&S IMPORTS
14 Shenkar Street
Petach, Tikva 49001
ISRAEL
TEL: +972 392 41119; info@weber.co.il

WEBER-STEPHEN PRODUCTS ITALIA Srl
Centro Polifunzionale "Il Pioppo"
Viale della Repubblica 46
36030 Povolaro di Dueville – Vicenza
ITALY
TEL: +39 0444 360 590; info-italia@weberstephen.com

WEBER-STEPHEN POLSKA Sp. z o.o.
Ul. Trakt Lubelski 153
04-766 Warszawa
POLSKA
TEL: +48 22 392 04 69; info-pl@weberstephen.com

GALACTEX OUTDOOR (PTY) LTD.
141-142 Hertz Draai
Meadowdale, Edenvale
Gauteng
SOUTH AFRICA
TEL: +27 11 454 2369; info@weber.co.za

WEBER-STEPHEN IBERICA Srl
Avda. de les Corts Catalanes 9-11 -
Despacho 10 B
E-08173 Sant Cugat del Vallès
Barcelona
SPAIN
TEL: +34 93 584 40 55; infoiberica@weberstephen.com

WEBER-STEPHEN SCHWEIZ GMBH
Talackerstr. 89a
8404 Winterthur
SWITZERLAND
TEL: +41 52 24402 50; info-ch@weberstephen.com

WEBER-STEPHEN PRODUCTS (U.K.) LIMITED
The Four Columns,
Broughton Hall Business Park
Skipton, North Yorkshire BD23 3AE
UNITED KINGDOM
TEL: +44 01756 692611;
customerservicenwe@weberstephen.com

WEBER-STEPHEN PRODUCTS LLC
200 East Daniels Road
Palatine, IL 60067-6266
USA
TEL: 847 934 5700; support@weberstephen.com

OOO WEBER-STEPHEN Vostok
142784 Moscow Region,
Leninskiy District
Rumyantsevo Village
Building 1
RUSSIA
TEL: +7 495 973 16 49; info.ru@weberstephen.com

WEBER-STEPHEN MAGYARORSZÁG KFT.
1138 Budapest, Váci út 186.
HUNGARY
TEL: +36 70 / 70-89-813; info-hu@weberstephen.com

For Republic of Ireland, please contact:
Weber-Stephen Products (U.K.) Limited.

For other eastern European countries, such as ROMANIA, SLOVENIA, CROATIA, TURKEY, or GREECE, please contact:
Weber-Stephen Deutschland GmbH,
info-EE@weberstephen.com.

For Baltic States, please contact:
Weber-Stephen Nordic ApS.

WEBER-STEPHEN PRODUCTS LLC
www.weber.com®

© 2012 Designed and engineered by Weber-Stephen Products LLC,
a Delaware limited liability company, located at 200 East Daniels Road, Palatine, Illinois 60067 U.S.A.

WEBER-STEPHEN PRODUCTS LLC
Customer Service Center: 90 West Hillcrest Boulevard, Schaumburg, IL 60195

1-800-446-1071 (USA ONLY) www.weber.com®